
SPIRE THE PINNACLE

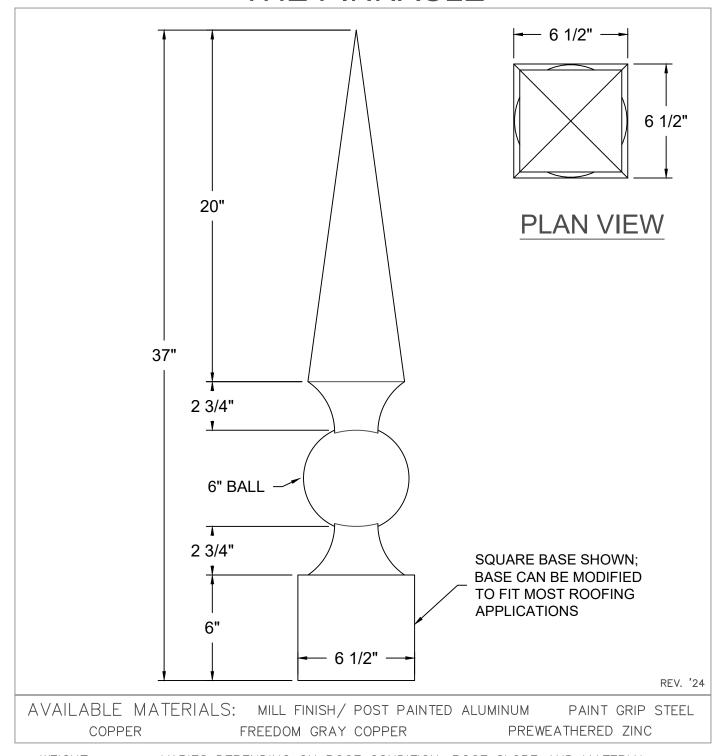

VARIES DEPENDING ON ROOF CONDITION, ROOF SLOPE AND MATERIAL WEIGHT:

INSTALLATION:

SEAL THE MOUNTING BRACKET (PROVIDED) TO THE ROOF SURFACE FOR A WATERTIGHT INSTALLATION. SET SPIRE BASE OVER MOUNTING BRACKET AND ATTACH USING FASTENERS PROVIDED. SPECIFY ROOF SLOPE FOR BRACKETS.

AVAILABLE WITH OTHER BASE OPTIONS FOR VARIOUS ROOF CONDITIONS. OTHER:

PROVIDE ROOF SLOPE.

AVAILABLE WITH LIGHTNING PROTECTION KIT. CONTINUE L.P. SYSTEM AS **OPTIONS:**

PER LOCAL CODE BY QUALIFIED LIGHTNING PROTECTION INSTALLERS.

