


# HIP/RIDGE SECTION

1. 1" TALL SINGLE LOCK HIP/RIDGE.
2. INSTALLATION PROCEDURE: a.) RUN PANELS PAST RIDGE 1". SEAM PANELS, THEN FOLD OVER RIB 6" FROM RIDGE. TURN BACK TOP 1" OF PANEL SO IT DOES NOT INTERFERE WITH PANELS ON OPP. SIDE. b.) RUN OPPOSITE PANELS PAST RIDGE 2 1/2". SEAM PANELS, THEN FOLD OVER RIB 6" FROM RIDGE. TURN TOP 2 1/2" OF PANELS STRAIGHT UP AND FOLD OVER THE 1" HEM OF OPP. PANELS.
3. ROSIN PAPER.
4. 30# ROOFING FELT.
5. ROOF DECK.

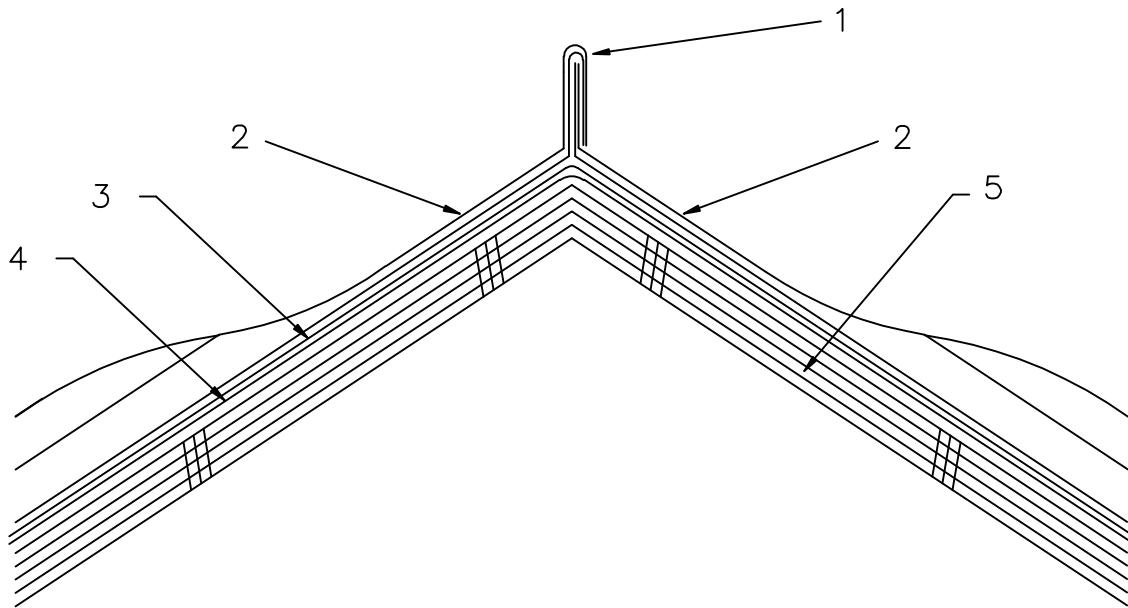

REV. 7/14